

QUIETVOX QV10 USER GUIDE




1 ON/OFF and VOLUME

2 EARPHONE
3.5mm jack

3 CONNECTION STATUS
 - connected

Seat properly in charger.
Make sure that the **battery icon** appears on the device's screen.

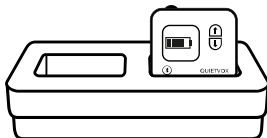

Keep the device in the charger while not in use

4 CHANGE CHANNEL
Lock/unlock channel by pressing both buttons **simultaneously**
Once unlocked press buttons to change channel
Make sure your device and your guide's device are **on the same channel**


5 BLUETOOTH
Set up instructions on back

Use the device only with the lanyard worn around the neck.

BLUETOOTH AND WIRED CONNECTIONS

Connecting Bluetooth® earphones and hearing aids

1. Put your earphone or hearing aid in **pairing mode**
2. If necessary, **unpair your smartphone** from your hearing aid!
3. Hold the QV10  button for one second
4. Scroll with **up and down arrows** to mark your bluetooth device
5. Press  again to confirm pairing
6. Stay alert to **traffic sounds** while using the device

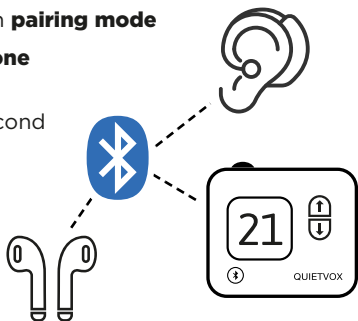

For hearing aids without Bluetooth we provide:

Over-the-ear headphone

Guests with hearing aid without "T-function"



1. Plug into the **3.5mm socket**.
2. Place it **over your hearing aid** and adjust for comfort

Induction loop

If the guest's hearing aid has a "T-function"



1. Plug into the **3.5mm socket**.
2. Place it **around your neck** and adjust for comfort
3. Set hearing aid to "T" mode